



1	ALT8-01000100	TOP COWLING ASSY		1
2	ALT8-01000102	HOOK		1
3	ALT8-01000103	HOLDER,CLAMP BAND		1
4	ALT8-01000001	SEAL		1
5	GB/T6170-2000	NUT M4		1
6	ALT8-01000002	SEAL, RUBBER 1		1
7	ALT8-01000101	TOP COWLING		1
8	GB/T818-20000	SCREW		6
9	ALT8-02000001	BUSH		2
10	ALT8-02000002	LEVER,CLAMP		1
11	GB/T7246-87	WASHER, WAVE		1
12	ALT8-02000003	HOLDER,SHEAR PIN		1
13	ALT8-02000004	WASHER		1
14	ALT8-02000005	LEVER,CLAMP		1
15	GB/T971-85	WASHER,PLATE		1
16	GB93-87	WASHER		1
17	GB/T5789-84	BOLT		1
18	ALT8-02000006	GROMMET		1

19	ALT8-02000007	COWLING,BOTTOM 1	поддон двигателя	1
20	ALT8-00000100	STOPER	кнопка останова двигателя	
21	ALT8-00000200	STOP LANYARD	трос страховочный	1
22	ALT8-02000008	GROMMET		1

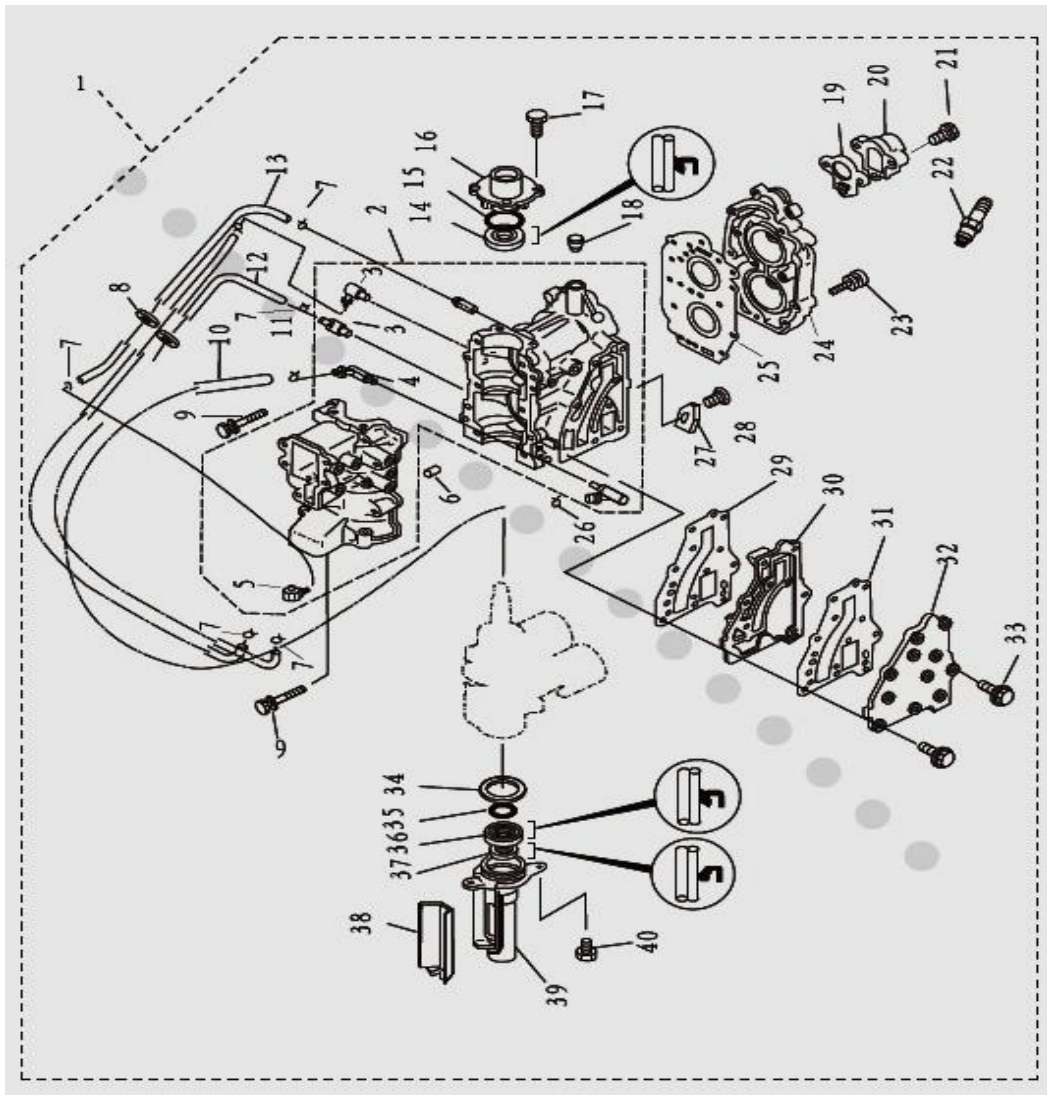


1	ALT8-03000000	CRANK CYLINDER ASSY	двигатель в сборе	1
2	ALT8-03020000	CRANKCASE ASSY	блок цилиндров	1
3	ALT8-03020001	NIPPLE,HOSE		1
4	ALT8-03020002	NOZZLE JET		1
5	ALT8-03020003	CHECK VALVE ASSY		2
6	ALT8-03020004	PIN,DOWEL		2
7	ALT8-03020005	CLIP A		6
8	ALT8-03020006	CLAMP A		1
9	GB/T5789-84	BOLT,WITH WASHER		8
10	ALT8-03020007	HOSE(L240)		1
11	ALT8-03020008	CIRCLIP		2
12	ALT8-03020009	HOSE(L200)		2
13	ALT8-03020010	HOSE(L167)		1
14	ALT8-03020011	OIL SEAL 20*36*7		1
15	GB/T3452.1-92	O-RING		1
16	ALT8-03020012	HOUSING, OIL SEAL		1


17	GB/T5789-84	BOLT		4
18	ALT8-03020013	PIN,DOWEL		1
19	ALT8-03020014	GASKET,COVER		1
20	ALT8-03020015	COVER,THERMOSTAT		1
21	GB/T5783-2000	BOLT,WITH WASHER		3
22	NGK BBPR7HS	PLUG,SPARK(NGK BPR7HS-10)		2
23	GB/T5789-84	BOLT,WITH WASHER		13
24	ALT8-03020016	HEAD,CYLINDER1	головка блока цилиндров	1
25	ALT8-03020017	GASKET,COVER	прокладка головки блока	1
26	ALT8-03020005	CLIP		1
27	ALT8-03020018	ANODE		1
28	GB/T819-2000	SCREW,COUNTERSUNK		1
29	ALT8-03020019	GASKET,EXHAUST INNER COVER	прокладка крышки выпуска	1
30	ALT8-03020020	INNER COVER,EXHAUST	крышка выпуска внутр.	1
31	ALT8-03020021	GASKET,EXHAUST OUTER COVER	прокладка крышки выпуска	1
32	ALT8-03020022	OUTER COVER,EXHAUST	крышка выпуска внеш.	1
33	GB/T5789-84	BOLT,WITH WASHER		11
34	GB/T97.1-85	WASHER,PLATE		1
35	GB/T3452.1-92	O-RING		1
36	ALT8-03020023	OIL SEAL 20*36*7		1
37	ALT8-03020024	OIL SEAL 20*36*7		1
38	ALT8-03020025	SEAL,CRANKCASE		1
39	ALT8-03020026	HOUSING,OIL SEAL	(в сборе)	1
40	GB/T5789-84	BOLT		2
41	GB/T5789-84	BOLT		2

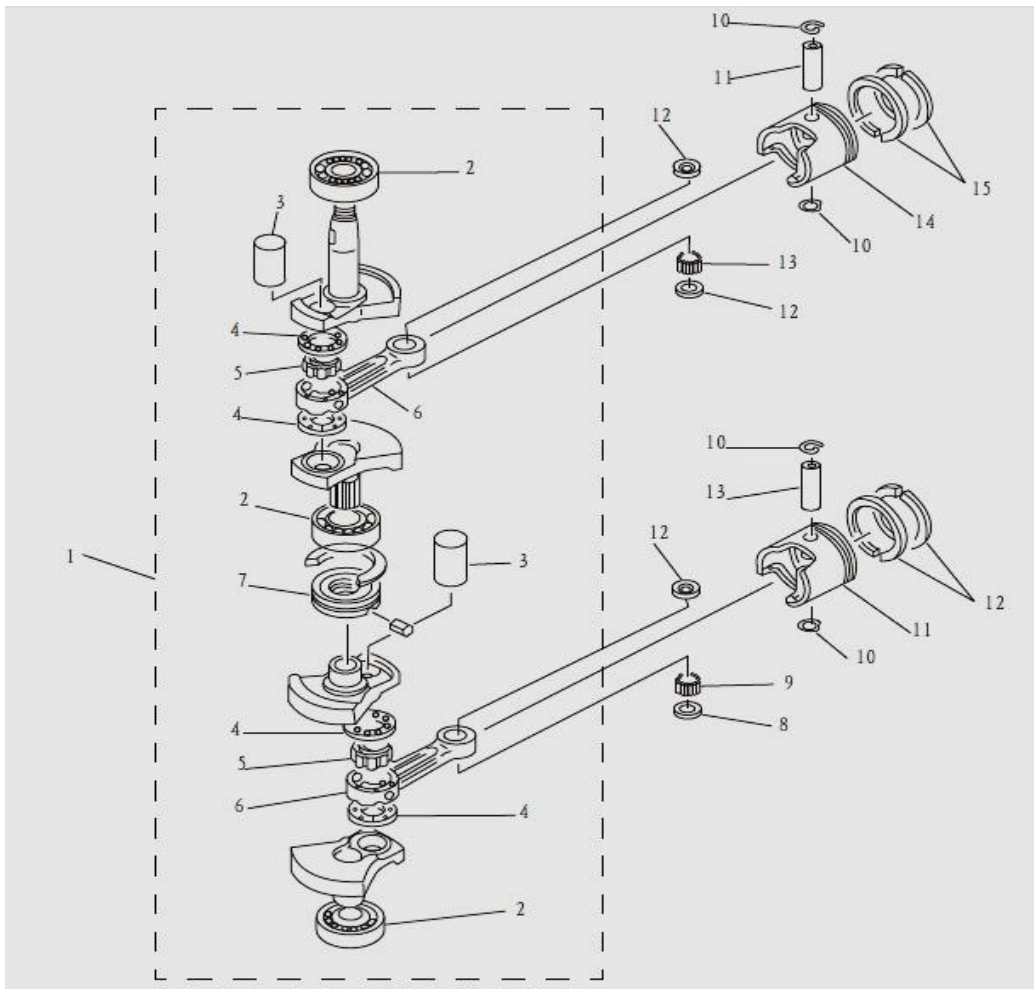


1	ALT8-03030000	CRANKSHAFT ASSY	коленвал в сборе	1
2	GB/T276-96	BEARING		3
3	ALT8-03030001	PIN,CRANK 1		2
4	ALT8-03030002	WASHER		4
5	GB/T273-96	BEARING		2
6	ALT8-03030003	ROD,CONNECTING		2
7	ALT8-03030004	SEAL,LABYRINTH 1		1
8	ALT8-03030005	WASHER,PLATE		4
9	ALT8-03030006	NEEDLE	игла подшипника	56
10	ALT8-03030007	CIRCLIP		4
11	ALT8-03030008	PISTON		2
12	ALT8-03030009	PISTON RING SET	кольца поршневые	4
13	ALT8-03030010	PIN,PISTON		2

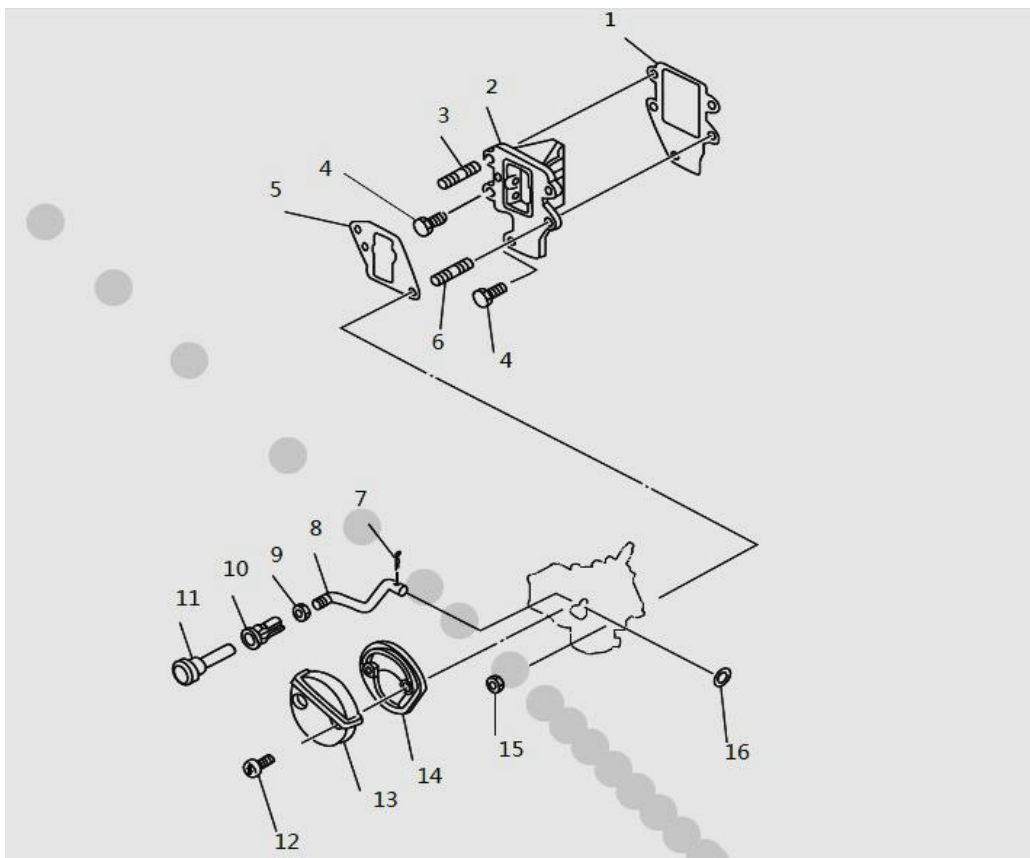


1	ALT8-03000001	GASKET, VALVE SET		1
		GASKET, VALVE ALUM		
2	ALT8-03000100	REED VALVE ASSY	клапанная площадка в сборе	2
3	ALT8-03000002	BOLT,STUD		1
4	GB/T5789-84	BOLT		3
5	ALT8-03000003	GASKET		1
6	ALT8-03000004	BOLT,STUD		1
7	GB/T91-2000	COTTER PIN		1
8	ALT8-03000005	ROD, CHOKE		1
9	GB/T6170-2000	NUT		2
10	ALT8-03000006	BUSH,CHOKE		1
11	ALT8-03000007	KNOB,CHOKE		1
12	GB/T8191-2000	SCREW,PAN HEAD		2
13	ALT8-03000008	SILENCER SET,INTAKE		1
14	ALT8-03000009	SILENCER COVER,INTAKE		1
15	GB/T6170-2000	NUT		2
16	ALT8-030000010	WASHER,PLATE		1

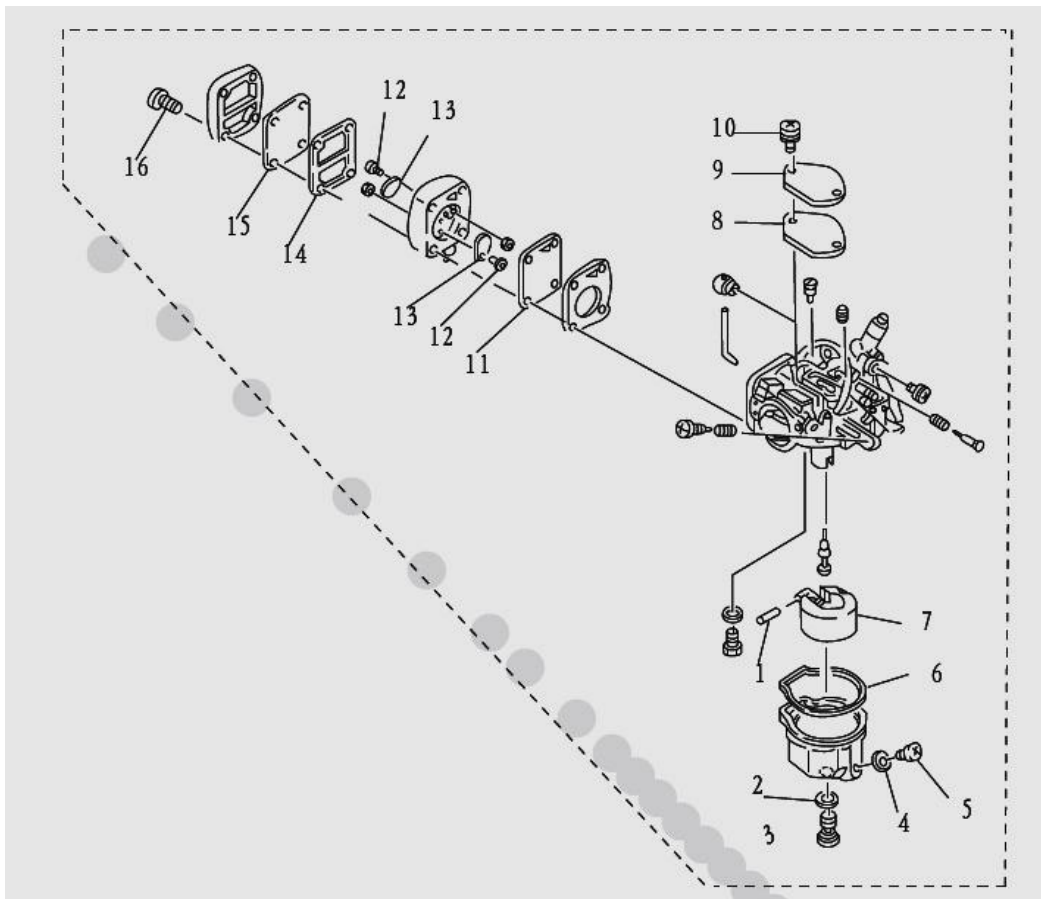

	ALT8-03040000	CARBURETOR ASSY	карбюратор в сборе	1
1	ALT8-03040001	PIN,FLOAT		1
2	ALT8-03040002	GASKET		1
3	ALT8-03040003	JET,MAIN(#80)		1
4	ALT8-03040004	GASKET		1
5	GB/T818-2000	SCREW,PAN HEAD		1
6	ALT8-03040005	CASKET,FLOAT CHAMBER		1
7	ALT8-03040006	FLOAT		1
8	ALT8-03040007	GASKET		1
9	ALT8-03040008	COVER,MIXING		1
10	GB/T5789-84	SCREW,WITH WASHER		2
11	ALT8-03040009	DIAPHRAGM		1
12	GB/T8191-2000	SCREW,PAN HEAD		2
13	ALT8-03040010	VALVE,CHECK		2
14	ALT8-03040011	GASKET,BODY 2		1
15	ALT8-03040012	DIAPHRAGM		1
16	GB/T818-2000	SCREW		4

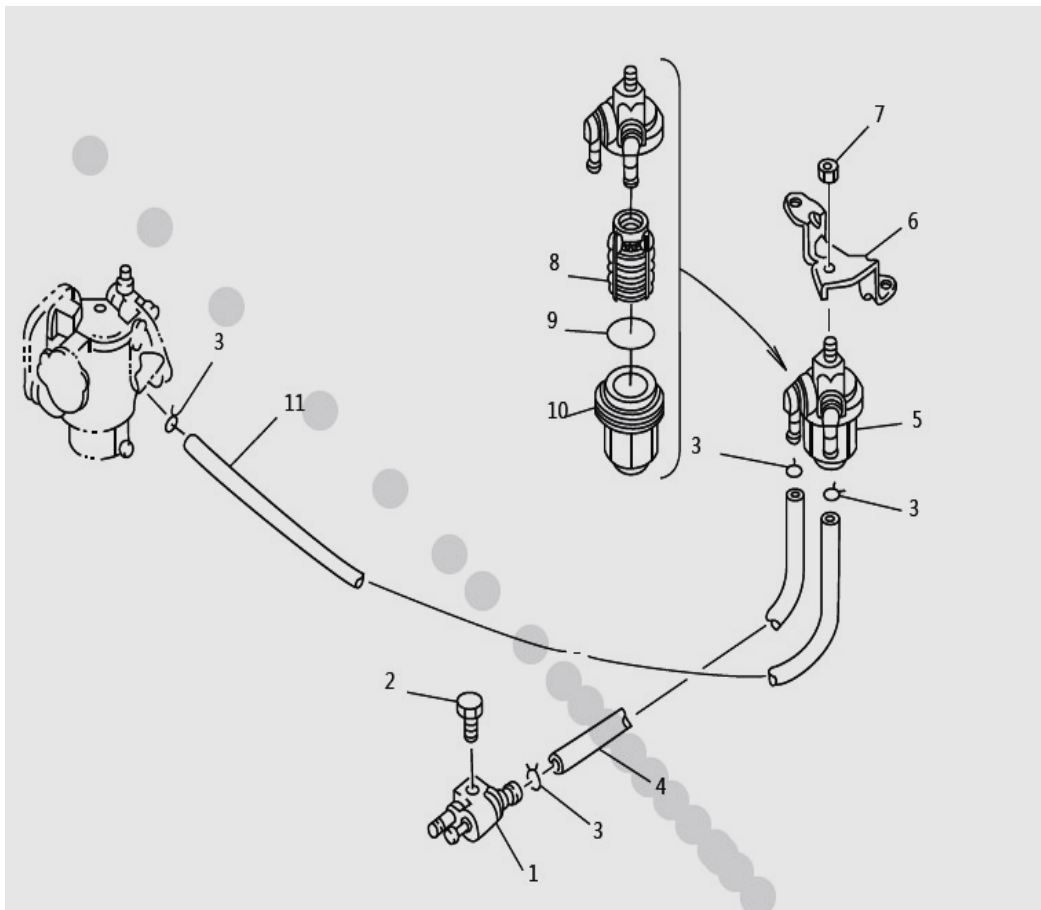


1	ALT8-03000200	FUEL PIPE JOINT COMP.1	топливный коннектор	1
2	GB/T5789-84	BOLT		1
3	ALT8-03020005	CLIP A		4
4	ALT8-03000011	HOSE(L150)		1
5	ALT8-03000300	FILTER ASSY	топливный фильтр в сборе	1
6	ALT8-03000301	BRACKET,FILTER		1
7	GB/T6170-2000	NUT		1
8	ALT8-03000302	ELEMENT,FILTER	фильтр. элемент	1
9	GB/T3452-92	O-RING		1
10	ALT8-03000303	CUP,FILTER		1
11	ALT8-03000012	HOSE(L235)		1

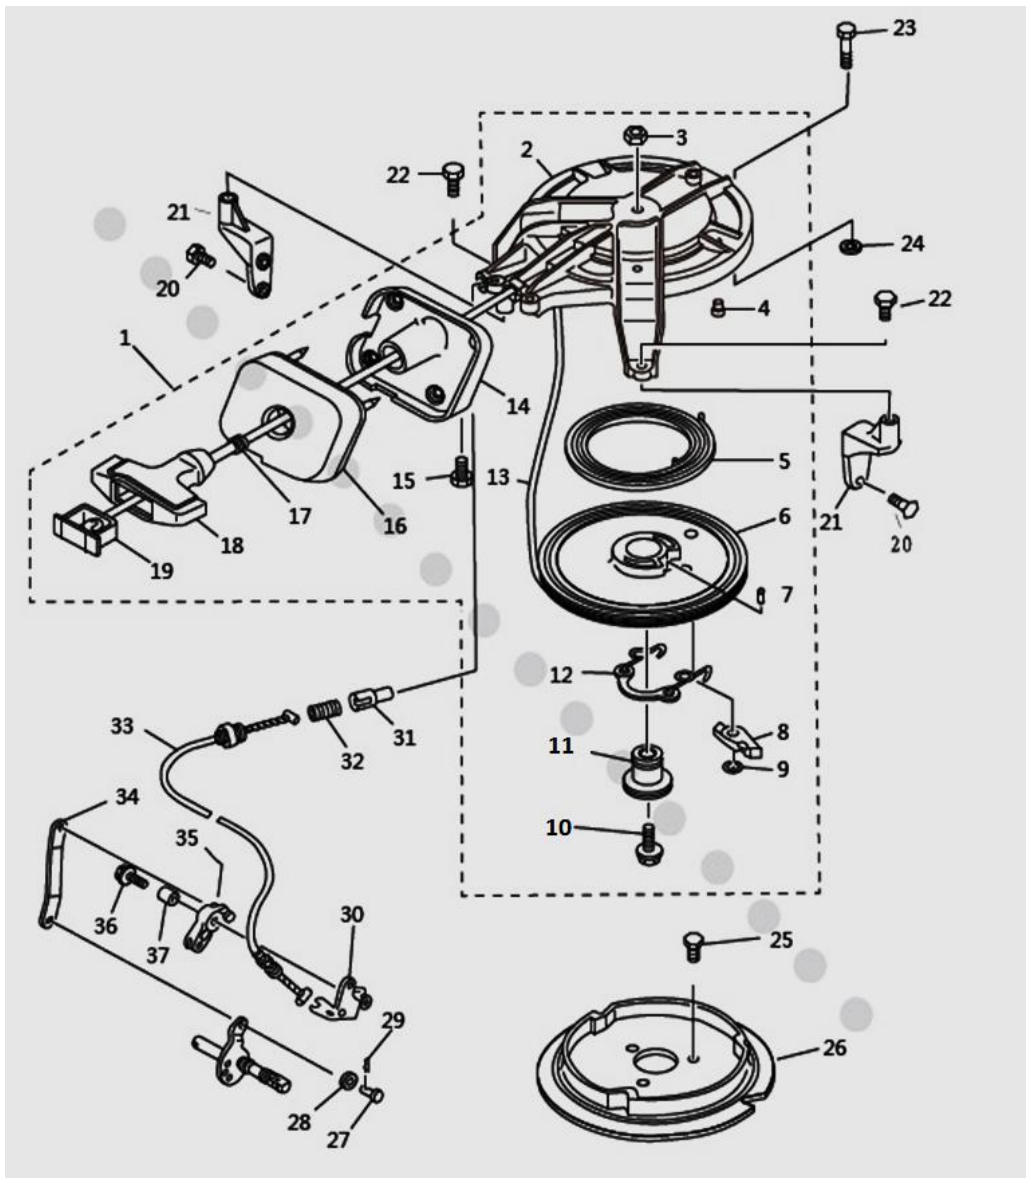


1	ALT8-03010000	STARTER ASSY	ручной стартер в сборе	1
2	ALT8-03010001	CASE,STARTER	корпус стартера	1
3	GB/T6170-2000	NUT		1
4	ALT8-03010002	STAY		5
5	ALT8-03010003	SPRING, SPIRAL	пружина старт. большая	1
6	ALT8-03010004	DRUM, SHEAVE	барaban стартера	1
7	ALT8-03010005	PIN, SPRING		1
8	ALT8-03010006	PAWL, DRIVE		1
9	GB894.1-86	CIRCLIP		1
10	GB/T5789-84	BOLT, WITH WASHER		1
11	ALT8-03010007	SHAFT, STARTER		1
12	ALT8-03010100	SPRING, DRIVE PAWL		1
13	ALT8-03010008	WIRE(L1650)		1
14	ALT8-03010009	GUIDE, ROPE		1
15	GB/T5789-84	BOLT		2
16	ALT8-03010010	SEAL, RUBBER		2
17	ALT8-03010011	DAMPER		1
18	ALT8-03010012	HANDLE, STARTER		1
19	ALT8-03010013	COVER		1
20	GB/T5789-84	BOLT		4

21	ALT8-03010014	STAY		2
22	GB/T5789-84	BOLT		2
23	GB/T5789-84	BOLT		1
24	GB/T97.1-85	WASHER,PLATE		1
25	GB/T5789-84	BOLT		3
26	ALT8-03010015	PULLEY,STARTER		1
27	ALT8-03010016	SET PIN		2
28	GB/T97.1-85	WASHER,PLATE		1
29	GB/T91-2000	CLIP		2
30	ALT8-03010017	STAY		1
31	ALT8-03010018	PLUNGER,STARTER STOP		1
32	ALT8-03010019	SPRING,COMPRESSION		1
33	ALT8-03010100	CABLE COMP,STARTER STOP		1
34	ALT8-03010020	LINK		1
35	ALT8-03010021	ARM		1
36	GB/T5789-84	BOLT,WITH WASHER		1
37	ALT8-03010022	COLLAR		1

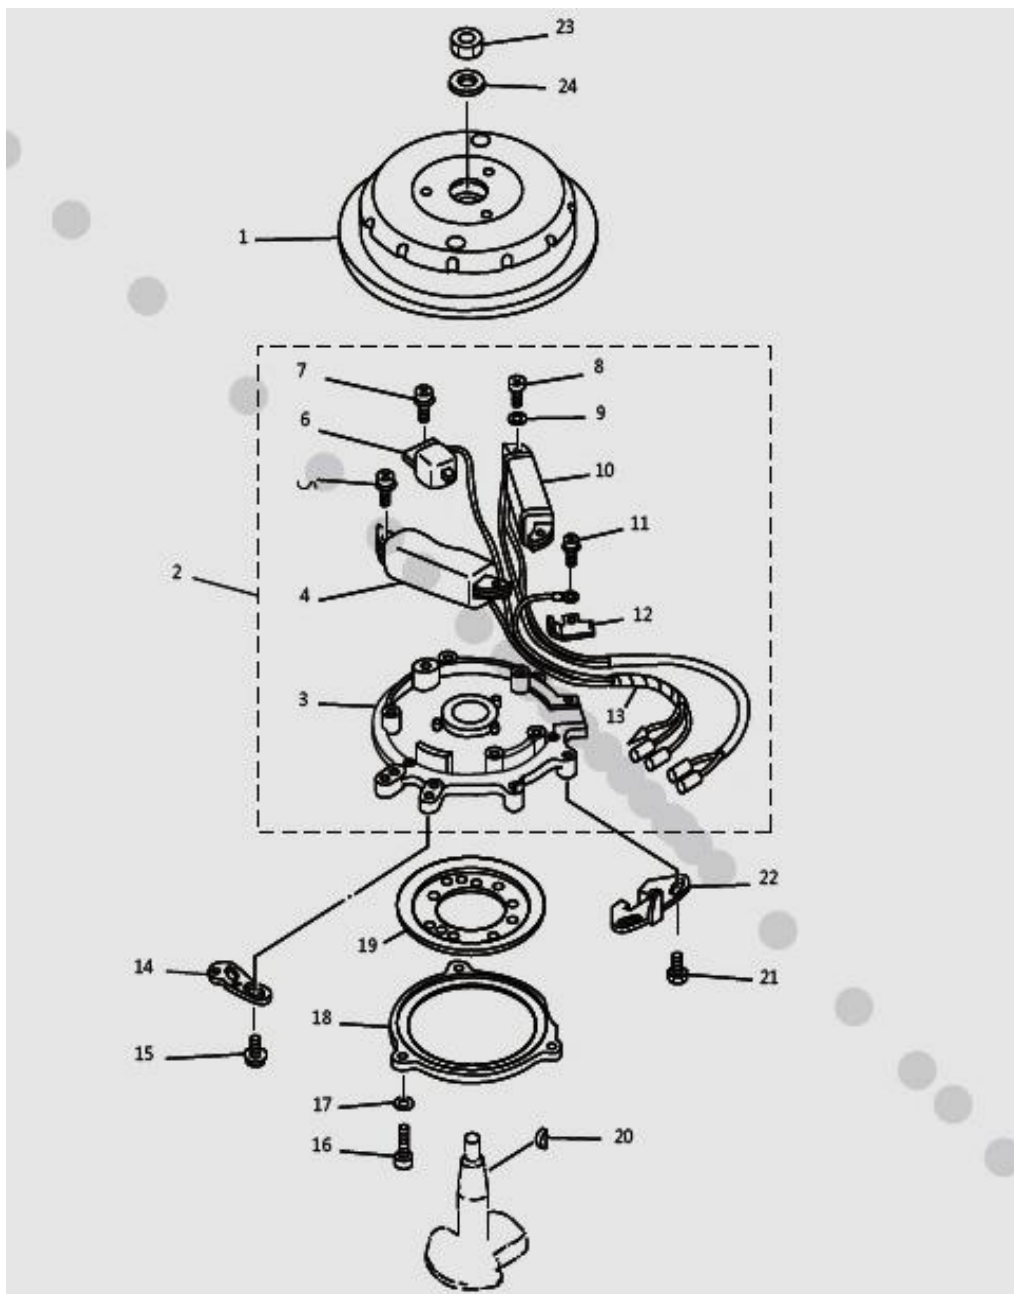


1	ALT8-03040100	ROTOR ASSY	ротор (маховик) в сборе	1
2	ALT8-03040200	BASE ASSY		1
3	ALT8-03040001	BASE,MAGNETO		1
4	ALT8-03040300	COIL,CHARGE ASSY	катушка генератора	1
5	GB/T5789-84	SCREW,WITH WASHER		2
6	ALT8-03040400	COIL,PULSER ASSY	катушка импульсная	1
7	GB/T818-94	SCREW,WITH WASHER		1
8	GB/T818-94	SCREW,PAN HEAD		2
9	GBP3--76	WASHER,SPRING		2
10	ALT8-03040500	COIL,LIGHTING	катушка световая	1
11	GB/T818-94	SCREW,PAN HEAD		1
12	ALT8-03040002	HOLDER		2
13	ALT8-03040600	LEAD WIRE ASSY		1
14	ALT8-03040003	CAM,ACCEL		1
15	GB/T5789-84	BOLT,WITH WASHER		2
16	GB/T818-94	SCREW,PAN HEAD		3
17	GB/T97.1-85	WASHER		3

18	ALT8-03040004	RETAINER,MAGNETO BASE		1
19	ALT8-03040005	RETAINER,MAGNETO BASE		1
20	GB/T1099.1-2003	KEY,WOODRUFF		1
21	GB/T5789-84	BOLT		2
22	ALT8-03040006	STOPPER,MAGNETO BASE		1
23	GB6170-2000	NUT		1
24	GB/T97.1-85	WASHER,PLATE		1

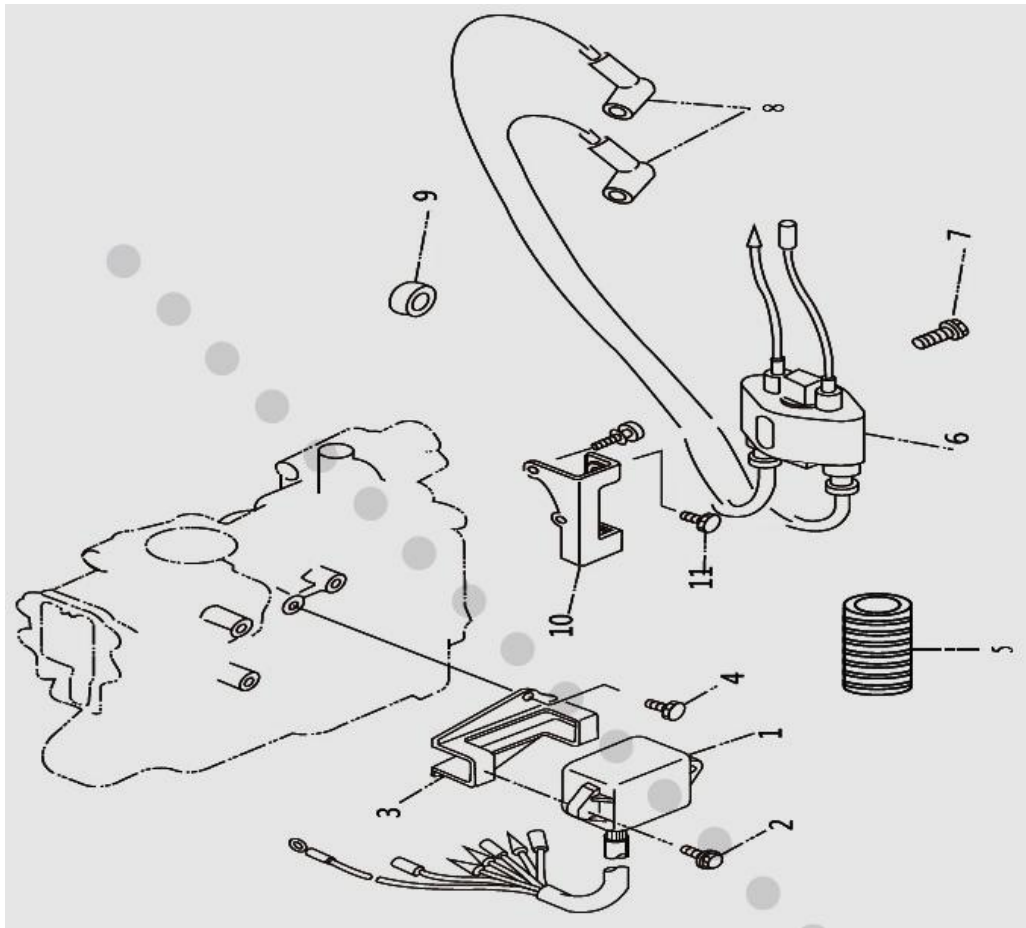


1	ALT8-03000400	C.D.I UNIT ASSY	коммутатор	1
2	GB/T5789-84	BOLT,WITH WASHER		2
3	ALT8-03000013	C.D.I BRACKET		1
4	GB/T5789-84	BOLT		2
5	ALT8-03000014	TUBE		1
6	ALT8-03000500	IGNITION COIL ASSY	катушка со свеч. проводами	1
7	GB/T5789-84	BOLT		2
8	ALT8-03000600	PLUG CAP ASSY		2
9	ALT8-03000015	GROMMET		1
10	ALT8-03000016	BRACKET		1
11	GB/T5789-84	BOLT		1

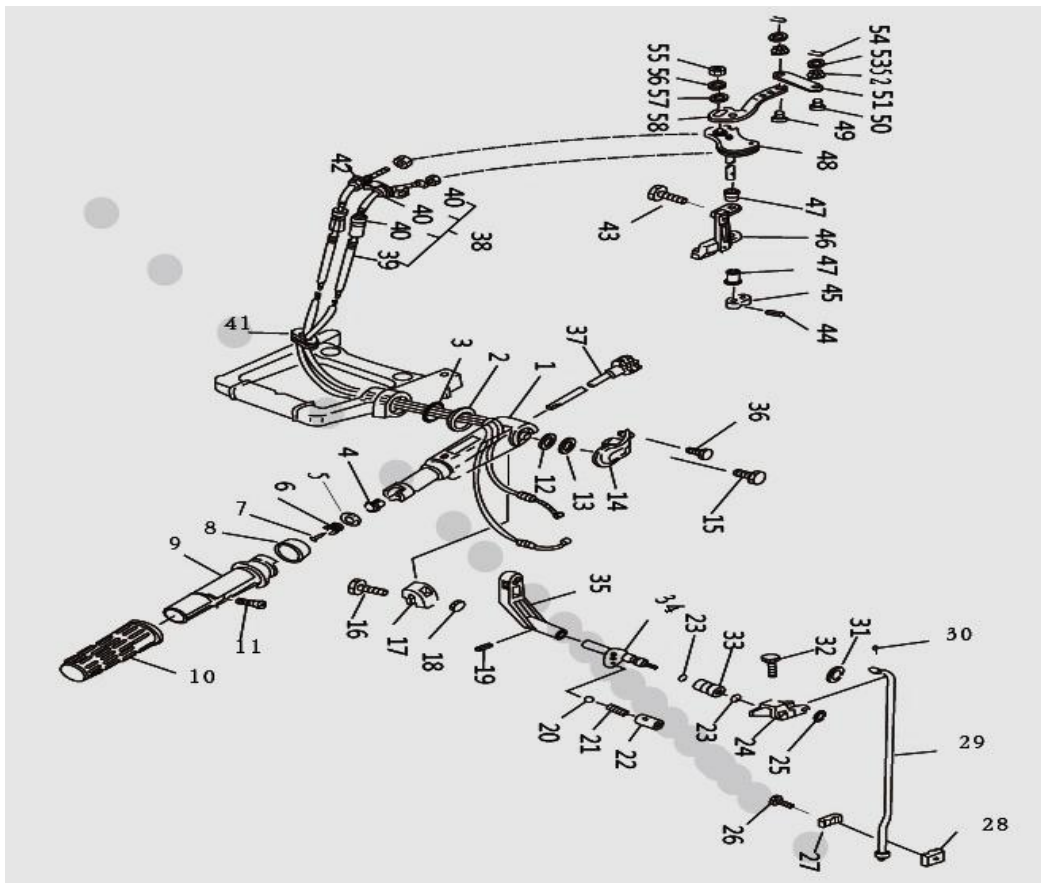


1	ALT8-04000001	HANDLE,STEERING	корпус румпеля	1
2	ALT8-04000002	SPACER		1
3	GB/T3452.1-92	O-RING		1
4	ALT8-04000003	SPACER		1
5	GB/T848-85	WASHER,PLATE		2
6	ALT8-04000004	SPRING,COMPRESSION		1
7	GB/T827-86	SCREW,COUNTERSUNK		1
8	ALT8-04000005	INDICATOR,THROTTLE		1
9	ALT8-04000006	GRIP,STEERING HANDLE		1
10	ALT8-04000007	GRIP COVER,STEERING HANDLE		1
11	GB/T819-94 M5*25	BOLT		1
12	ALT8-04000008	BUSH		1
13	ALT8-04000009	SPACER,HANDLE		2
14	ALT8-04000010	HANDLE,STEERING	заглушка корпуса румпеля	1
15	GB/T5789-84	BOLT		1
16	GB/T5789-84	BOLT		1
17	ALT8-04000011	FRICTION,STEERING HANDLE GRIP		1
18	GB943-88	NUT,SELF-LOCKING		1
19	GB/T819-94	BOLT		1
20	GB/T17445-98	BALL		1
21	ALT8-04000012	SPRING,COMPRESSION		1
22	ALT8-04000013	BUSHING		1
23	GB/T3452.1-92	O-RING		2
24	ALT8-04000014	LEVER,SHIFT ROD		1
25	GB/T97.1-85	WASHER,PLAIN		2
26	GB/T5789-84	BOLT		1

27	ALT8-04000015	CONNECTOR,SHIFT ROD		1
28	ALT8-04000016	CONNECTOR,SHIFT ROD		1
29	ALT8-04000017	ROD,SHIFT		1
30	GB/T91-2000	PIN,COTTER		1
31	GB93-76	WASHER,SPRING		1
32	GB/T5789-84	BOLT		1
33	ALT8-04000018	BUSHING,SHIFT ROD LEVER		1
34	ALT8-04000100	SHAFT,CHANGE		1
35	ALT8-04000019	HANDLE,GEAR SHIFT	ручка п/п	1
36	GB/T5789-84	BOLT		1
37	ALT8-04000200	LEVER,THROTTLE ASSY		1
38	ALT8-04000300	THROTTLE CABLE ASSY	трос газа в сборе	2
39	ALT8-04000301	THROTTLE CABCE		2
40	GB/T6170-2000	NUT		4
41	ALT8-04000020	GROMMET		1
42	ALT8-04000021	STAY,THROTTLE WIRE		1
43	GB/T5789-84	BOLT		2
44	GB/T879.2-2000	PIN,SPRING		1
45	ALT8-04000022	STAY		1
46	ALT8-04000023	BRACKET 1		1
47	ALT8-04000024	BUSH		2
48	ALT8-04000400	PULLEY ASSY		1
49	ALT8-04000025	SET PIN		1
50	ALT8-04000026	PIN,CLEVIS		1
51	ALT8-04000027	LEVER,MAGNETO CONTROL		1
52	GB955-87	WASHER,WAVE		2
53	GB/97.1-85	WASHER,PLAIN		2
54	GB/T91-2000	CLIP		2
55	GB/T6170-2000	NUT,HEXAGON		1
56	GB93-76	WASHER,SPRING		1
57	GB/T97.1-85	WASHER,PLATE		1
58	ALT8-04000028	LEVER,MAGNETO CONTROL		1

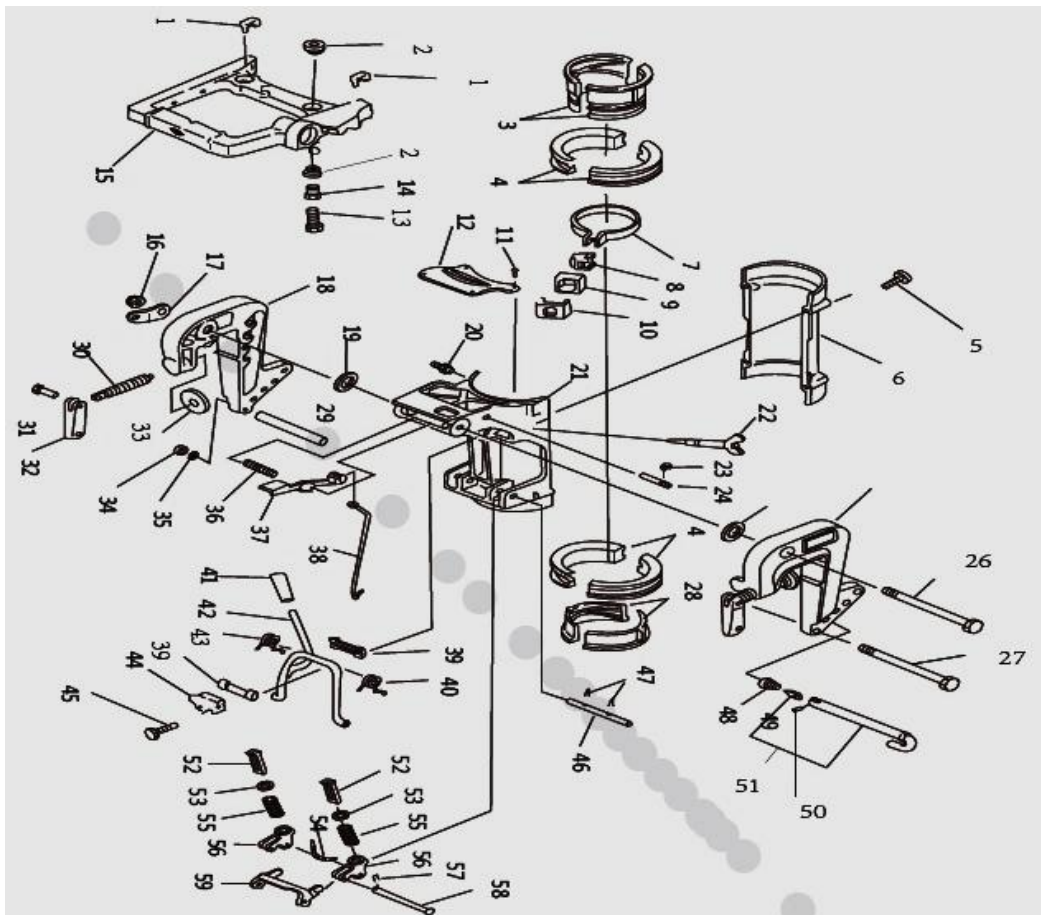


1	ALT8-05000001	SPACER, FRICTION		2
2	ALT8-05000002	DAMPER		4
3	ALT8-05000003	BUSHING, PIVOT SHAFT		2
4	ALT8-05000004	BUSHING, PIVOT SHAFT		4
5	GB/T5789-84	BOLT		4
6	ALT8-05000005	BRACKET, SWIVEL		1
7	ALT8-05000006	PLATE, FRICTION		1
8	ALT8-05000100	NUT ASSY		1
9	ALT8-05000007	COVER		1
10	ALT8-05000008	PLATE, FRICTION		1
11	GB871-86	RIVET		4
12	ALT8-05000009	COVER		1
13	GB/T5789-84	BOLT		2
14	ALT8-05000010	PIPE		2
15	ALT8-05000011	BRACKET, STEERING	ручка переноски	1
16	GB953-88	NUT, SELF-LOCKING		1
17	ALT8-05000012	PLATE, CLAMP BRACKET		1
18	ALT8-05000201	BRACKET, CLAMP		1
19	ALT8-05000013	WASHER, PLATE		2
20	ALT8-05000014	NIPPLE, GREASE		1
21	ALT8-05000015	BRACKET, SWIVEL		1
22	ALT8-05000016	SCREW, FRICTION PIECE		1
23	GB/T91-2000	CIRCLIP		1
24	ALT8-05000017	PIN		2
25	ALT8-05000301	BRACKET, CLAMP 1		1
26	GB/T5789-84	BOLT		1

27	GB/T5789-84	BOLT		1
28	ALT8-05000018	BUSHING,PIVOT SHAFT		2
29	ALT8-05000019	COLLAR		1
30	ALT8-05000202	SCREW,TRANSOM CLAMP		2
31	ALT8-05000203	PIN		2
32	ALT8-05000204	HANDLE,TRANSOM CLAMP		2
33	ALT8-05000205	PAD,TRANSOM CLAMP		2
34	GB/T6170-2000	NUT,HEXAGON		1
35	ALT8-05000020	WASHER,PLATE		1
36	ALT8-05000021	SPRING,COMPRESSION A		1
37	ALT8-05000400	TILT LEVER ASSY		1
38	ALT8-05000022	PLATE,TILT LOCK		1
39	ALT8-05000023	BUSHING		2
40	ALT8-05000024	SPRING,TORSION A		1
41	ALT8-05000025	KNOB,TILT		1
42	ALT8-05000500	LEVER,TILT STOP		1
43	ALT8-05000026	SPRING,TORSION B		1
44	ALT8-05000027	BRACKET,SWIVEL		2
45	GB/T5789-84	BOLT		2
46	ALT8-05000028	SHAFT,REVERSE LOCK		1
47	GB/T91-2000	CLIP		2
48	ALT8-05000601	SPRING,CONICAL		1
49	ALT8-05000602	PLATE,TILT LOCK		1
50	GB871-86	PIN,SPRING		1
51	ALT8-05000600	TILT LEVER ASSY		1
52	ALT8-05000029	ARM,TILT LOCK		2
53	ALT8-05000030	STOPPER		2
54	ALT8-05000031	SPRING,TORSION		1
55	ALT8-05000032	SPRING,COMPRESSION B		2
56	ALT8-05000700	PLATE,TILT LOCK		2
57	GB/T91-2000	CLIP		1
58	ALT8-05000033	PIN,CLEVIS		1
59	ALT8-05000034	PLATE,TILT LOCK		1

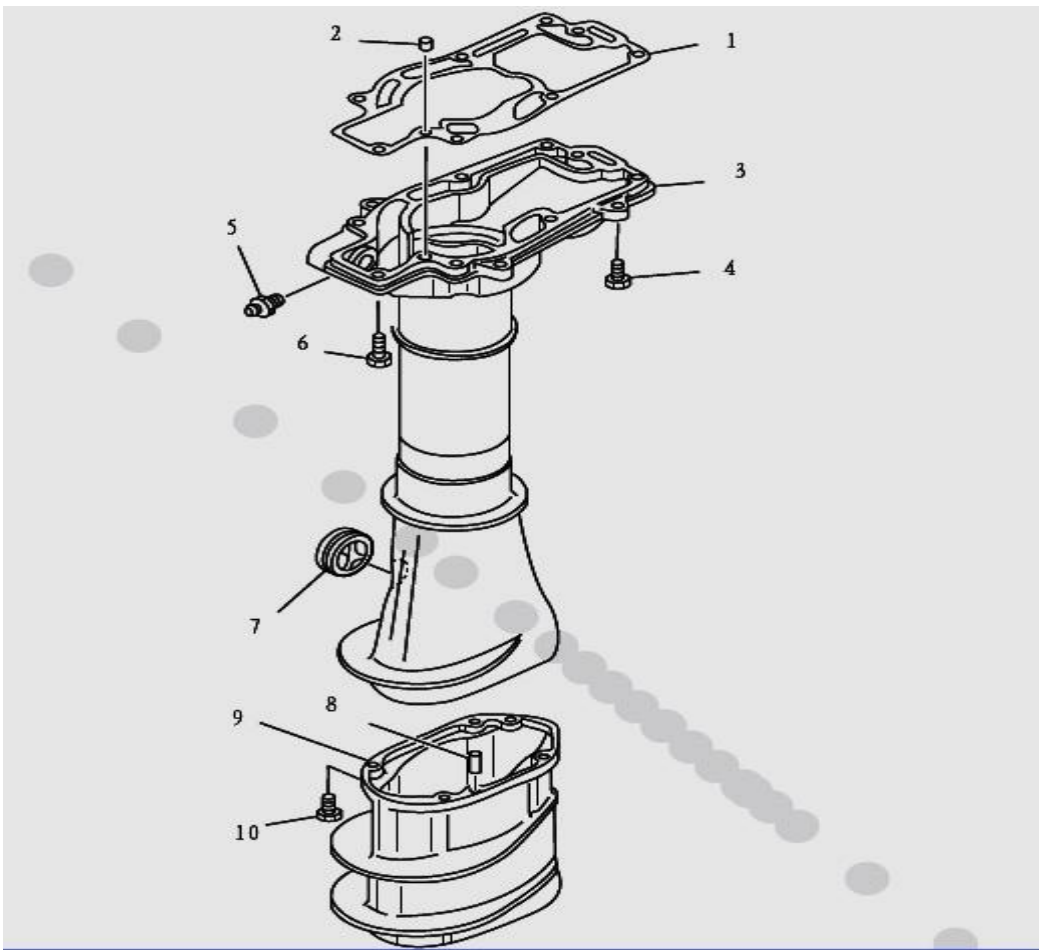


1	ALT8-06000001	GASKET,UPPER CASING		1
2	GB/T119.1-2000	PIN,DOWEL		2
3	ALT8-06000002	CASING,UPPER	дейдвуд	1
4	GB/T5789-84	BOLT,WITH WASHER		4
5	ALT8-05000014	NIPPLE,GREASE		1
6	GB/T5789-84	BOLT,WITH WASHER		7
7	ALT8-06000003	COVER,UPPER CASING		1
8	GB/T119.2-2000	PIN,DOWEL		2
9	ALT8-06000004	EXTENSION		1
10	GB/T5789-84	BOLT,WITH WASHER		4

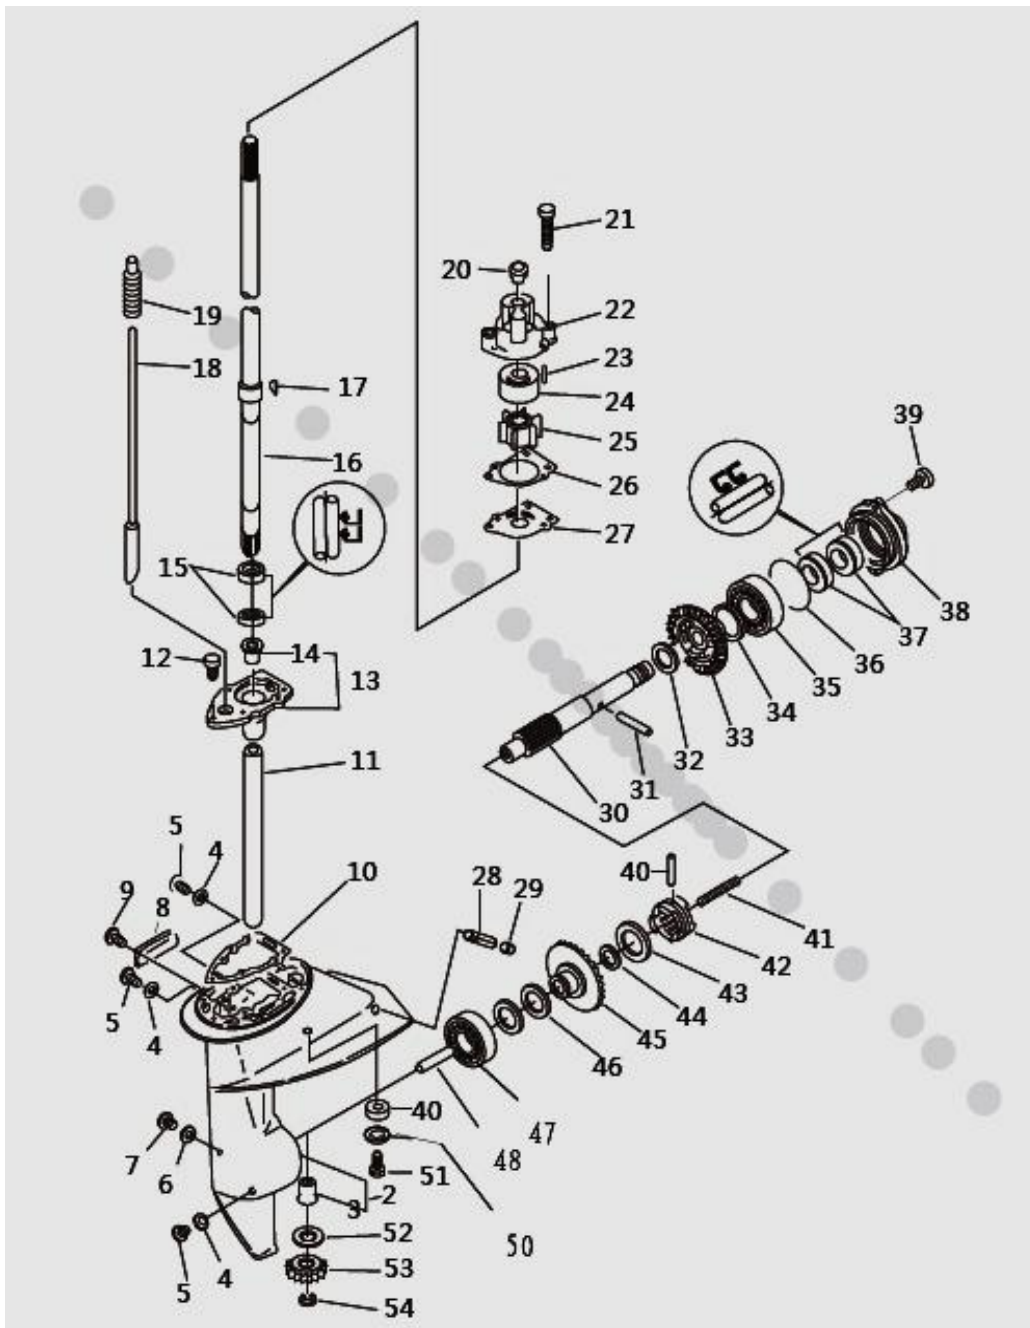

1	ALT8-07000000	LOWER UNIT ASSY (S)	редуктор в сборе	1
	ALT8-07000000	LOWER UNIT ASSY (L)		1
2	ALT8-07000100	LOWER CASING ASSY	корпус редуктора	1
3	ALT8-07000101	BUSHING,DRIVE SHAFT		1
4	ALT8-07000001	GASKET		3
5	GB/T5782-2000	PLUG,STRAIGHT SCREW		3
6	ALT8-07000002	GASKET		1
7	ALT8-07000003	SCREW		1
8	ALT8-07000004	COVER,WATER INLET 1		1
9	GB/819-94	SCREW,COUNTERSUNK		2
10	ALT8-07000005	PACKING,LOWER CASING		1
11	ALT8-07000006	COLLAR		1
12	GB/T5789-86	BOLT		2
13	ALT8-07000200	HOUSING,WATER PUMP	обойма подшипника	1
14	ALT8-07000201	BUSHING,DRIVE SHAFT		1

15	ALT8-07000007	OIL SEAL		2
16	ALT8-07000300S	DRIVE SHAFT COMP S	вертикальный вал	1
	ALT8-07000300L	DRIVE SHAFT COMP L		1
17	GB/T1099.1-2003	KEY,WOODRUFF		1
18	ALT8-07000401S	SHIFT CAM ASSY S		1
	ALT8-07000401L	SHIFT CAM ASSY L		1
19	ALT8-07000008	BOOT,SHIFT ROD		1
20	ALT8-07000009	DAMPER WATER SEAL2		1
21	GB/T5789-86	BOLT		3
22	ALT8-07000011	HOUSING,WATER PUMP		1
23	GB/T119.1-2000	PIN,DOWEL		2
24	ALT8-07000012	INSERT WATER PUMP		1
25	ALT8-07000500	IMPELLER		1
26	ALT8-07000013	GASKET,WATER PUMP		1
27	ALT8-07000014	OUTER PLATE,CARTRIDGE		1
28	ALT8-07000102	COVER,WATER INLET 2		1
29	ALT8-07000103	PLUG,STRAIGHT		1
30	ALT8-07000015	SHAFT,PROPELLER	гребной вал	1
31	ALT8-07000016	PIN,STRAIGHT		1
32	ALT8-07000017	WASHER,PLATE A		1
33	ALT8-07000600	GEAR,FORWARD	шестерня задней передачи	1
34	ALT8-07000018	SHIM(T: 0.10MM)	шайба регулировочная	1
35	GB/T276-96	BEARING 6205		1
36	GB/T3452.1-92	O-RING		1
37	ALT8-07000019	OIL,SEAL		2
38	ALT8-07000020	CAP,LOWER CASING	стакан редуктора	1
39	GB/T5789-86	BOLT		3
40	GB/T119.1-2000	PIN,DOWEL		1
41	ALT8-07000021	SPRING,COMPRESSION		1
42	ALT8-07000022	CLUTCH,DOG	муфта сцепления	1
43	ALT8-07000023	CIRCLIP		1
44	ALT8-07000024	WASHER,PLATE B		1
45	ALT8-07000700	GEAR,REVERSE	шестерня передней передачи	1
46	ALT8-07000025	WASHER,PLATE		1
47	GB/T276-96	BEARING 6004		1
48	ALT8-07000026	PLUNGER,SHIFT		1
49	ALT8-07000027	ANODE		1
50	GB861.1-86	WASHER,INTERNAL TOOTH		1
51	GB/T5789-86	BOLT,FLANGE		1
52	ALT8-07000028	SHIM(T:0.10MM)		1
53	ALT8-07000029	PINION(13T)	шестерня ведущая	1
54	GB896-86	CIRCLIP		1

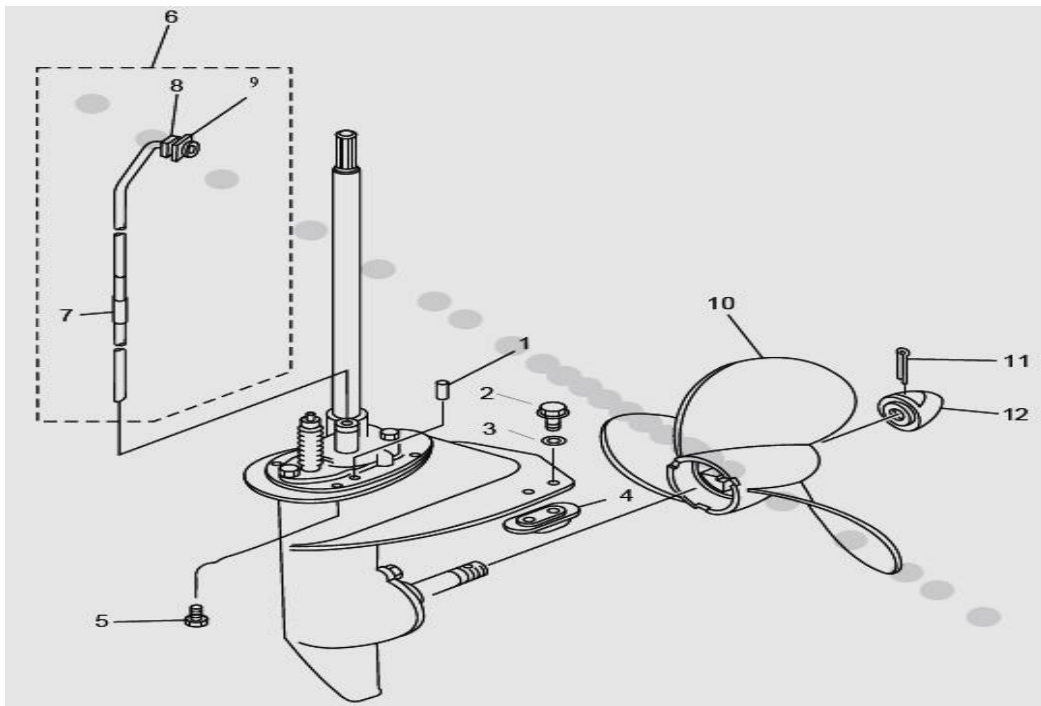

1	GB/T119.1-2000	PIN,DOWEL		2
2	GB/T5789-86	BOLT,INTERNAL TOOTH		2
3	GB861.1-86	WASHER,FLANGE		2
4	ALT8-08000001	ANODE		1
5	GB/T5789-86	BOLT		4
6	ALT8-08000100S	WATER TUBE ASSY S	трубка охлаждения	1
	ALT8-08000100L	WATER TUBE ASSY L		1
7	ALT8-08000002	HOSE		1
8	ALT8-08000003	DAMPER,WATER SEAL 1		1
9	ALT8-08000004	SET PLATE, WATER TUBE		1
10	ALT8-08000300	PROPELLER		1
11	GB/T91-2000	PIN,COTTER		1
12	ALT8-08000200	NUT,PROPELLER		1