



REF. NO.	PART NO.	DESCRIPTION		NEEDED PCS
1	ALT2. 5-01000009	APRON	корпус двигателя лев.	1
2	GB93-88	NUT,SQUARE		2
3	GB/T818-2000	SCREW,PAN HEAD		2
4	GB/T818-2000	SCREW,PAN HEAD		2

5	ALT2. 5-02000014	SILENCER, INTAKE		1
6	ALT2. 5-01000002	PLATE, CONTROL		1
7	ALT2. 5-01000003	SCREW, COUNTERSUNK		1
8	GB/T818-2000	SCREW, PAN HEAD		2
9	ALT2. 5-01000004	WASHER, FUEL TANK		1
10	ALT2. 5-01000001	FUEL TANK	топливный бак	1
11	ALT2. 5-01000005	CAP, FUEL TANK	прокладка бака	1
12	ALT2. 5-01000200	FUEL TANK ASSY	крышка бака	1
13	GB/T5789-2000	FLANGE BOLT		2
14	GB/96-85	WASHER		3
15	ALT2. 5-01000201	SEAT, RUBBER		2
16	GB/T56170-86	NUT		2
17	ALT2. 5-01000007	STAY, PIPE		2
18	ALT2. 5-01000013	PIPE, FUEL		1
19	ALT2. 5-01000300	COVER, PLUG CAP		1
20	ALT8-03020005	CLAMP, PIPE A		2
21	ALT2. 5-01000019	KNOB, OIL SWITCH		1
22	GB/T818-2000	BOLT, PAN HEAD		1
23	ALT2. 5-01000015	SPRING, CARBURETOR		1
24	GB91-2000	PIN COTTER		1
25	GB/T818-2000	BOLT, PAN HEAD		1
26	GB/T96-85	WASHER		1
27	ALT2. 5-01000016	DAMPER, LOCATING		1
28	ALT2. 5-01000017	PIN, CONNECTION		1
29	ALT2. 5-01000400	SUPPORTER		1
30	ALT2. 5-01000018	KNOB, THROTTLE		1
31	GB/T819-2000	HEX NUT		1
32	ALT2. 5-01000022	BOLT, PAN HEAD		1
33	ALT8-00000200	WIRE, SWITCH		1
34	GB/T6170-86	NUT		1
35	ALT2. 5-01000102	SWITCH BASE		1
36	GB/T5789-2000	FLANGE BOLT		1
37	ALT8-00000100	ENGINE STOP SWITCH	кнопка останова двиг.	1
38	ALT2. 5-01000020	PROTECTOR, OUTER		1
39	ALT2. 5-01000021	STAY, 2		1
40	GB/T5789-2000	FLANGE BOLT		1
41	GB/T5789-2000	FLANGE BOLT		1
42	ALT2. 5-01000010	APRON	корпус двигателя прав.	1
43	GB/T845-86	SCREW, PAN HEAD		2
44	ALT2. 5-01000011	WASHER, LONG		6
45	ALT2. 5-01000012	LANYARD, STOP SWITCH		1

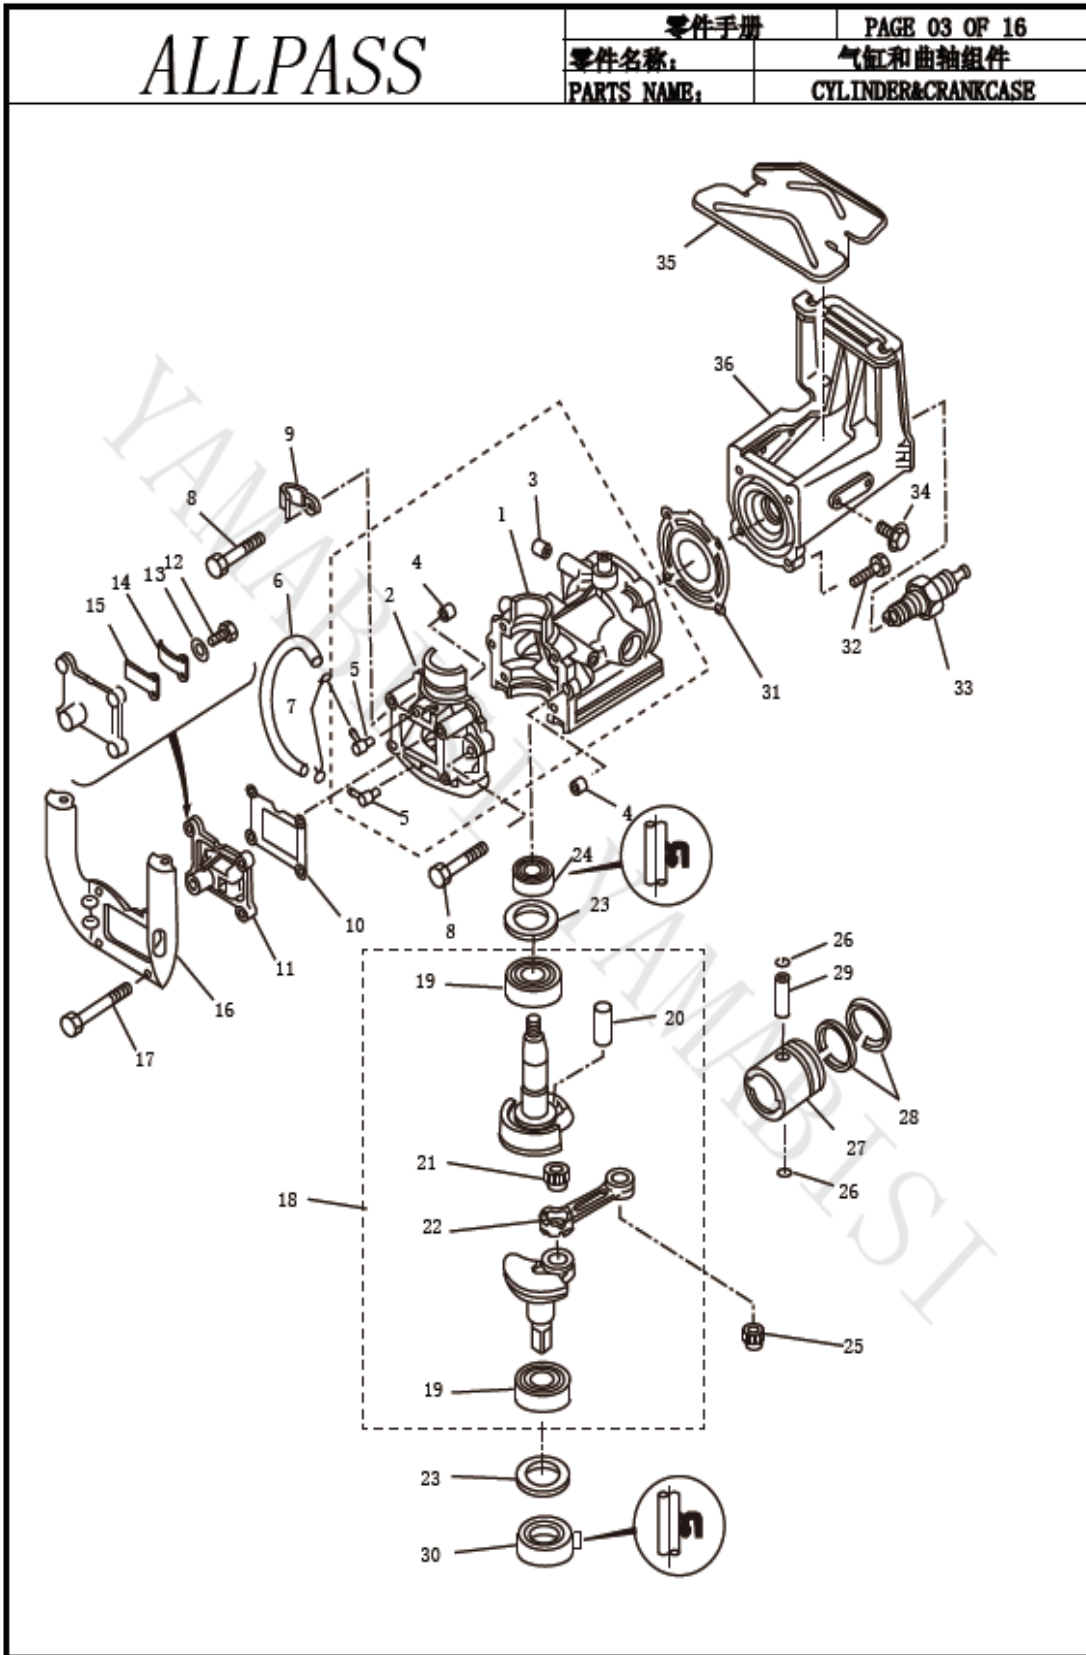


1	ALT2.5-02000100	CRANKCASE	1
	ALT2-02000100	CRANKCASE	1
2	ALT2.5-02000001	CAP,CRANKCASE	1
	ALT2-02000001	CAP,CRANKCASE	1
3	ALT2.5-02000021	NUT	1
4	ALT2.5-02000022	PIN,COTTER	2
5	ALT8-03020002	HOSE,AIR	2

6	ALT2. 5-02000023	FUEL PIPE		1
7	ALT8-03020008	CLAMP,PIPE		2
8	GB/T5789-2000	HEX FLANGE BOLT		2
9	ALT2. 5-02000024	CLAMP,WIRE		1
10	ALT2. 5-02000004	GASKET,INTAKE VALVE		1
11	ALT2. 5-02000200	BODY,INTAKE VALVE		1
12	GB/T818-2000	BOLT,PAD HEAD		2
13	GB/T93-87	WASHER		2
14	ALT2. 5-02000203	PLATE,LIMIT		1
15	ALT2. 5-02000202	REED,VALVE		1
16	ALT2. 5-02000016	BRACKET,SUPPORTER		1
17	GB/T5789-2000	HEX FLANGE BOLT		4
18	ALT2. 5-02000007	CRANKSHAFT		1
19	GB/T276-96	BEARING		2
20	ALT2. 5-02000030	PIN,CRANK		2
21	GB/T273-96	NEEDLE BEARING		1
22	ALT2. 5-02000005	ROD		1
23	ALT2. 5-02000006	PIN,CRANK		2
24	ALT2. 5-02000026	OIL SEAL		1
25	GB/T273-96	BEARING		1
26	ALT2. 5-02000027	CIRCLIP		2
27	ALT2. 5-02000008	PISTON		1
	ALT2-02000008	PISTON		1
28	ALT2. 5-02000009	RING,PISTON		2
	ALT2-02000009	RING,PISTON		2
29	ALT2. 5-02000010	PIN,PISTON		1
	ALT2-02000010	PIN,PISTON		1
30	ALT2. 5-02000029	OIL SEAL		1
31	ALT2. 5-02000025	GASKET,CYLINDER HEAD		1
32	GB/T5789-2000	HEX FLANGE BOLT		4
33	NGK BPR7HS	SPARK PLUG		1
34	GB/T5789-2000	HEX FLANGE BOLT		2
35	ALT2. 5-02000012	PROTECTOR,TANK		1
36	ALT2. 5-02000002	HEAD,CYLINDER		1
	ALT2-02000002	HEAD,CYLINDER		1

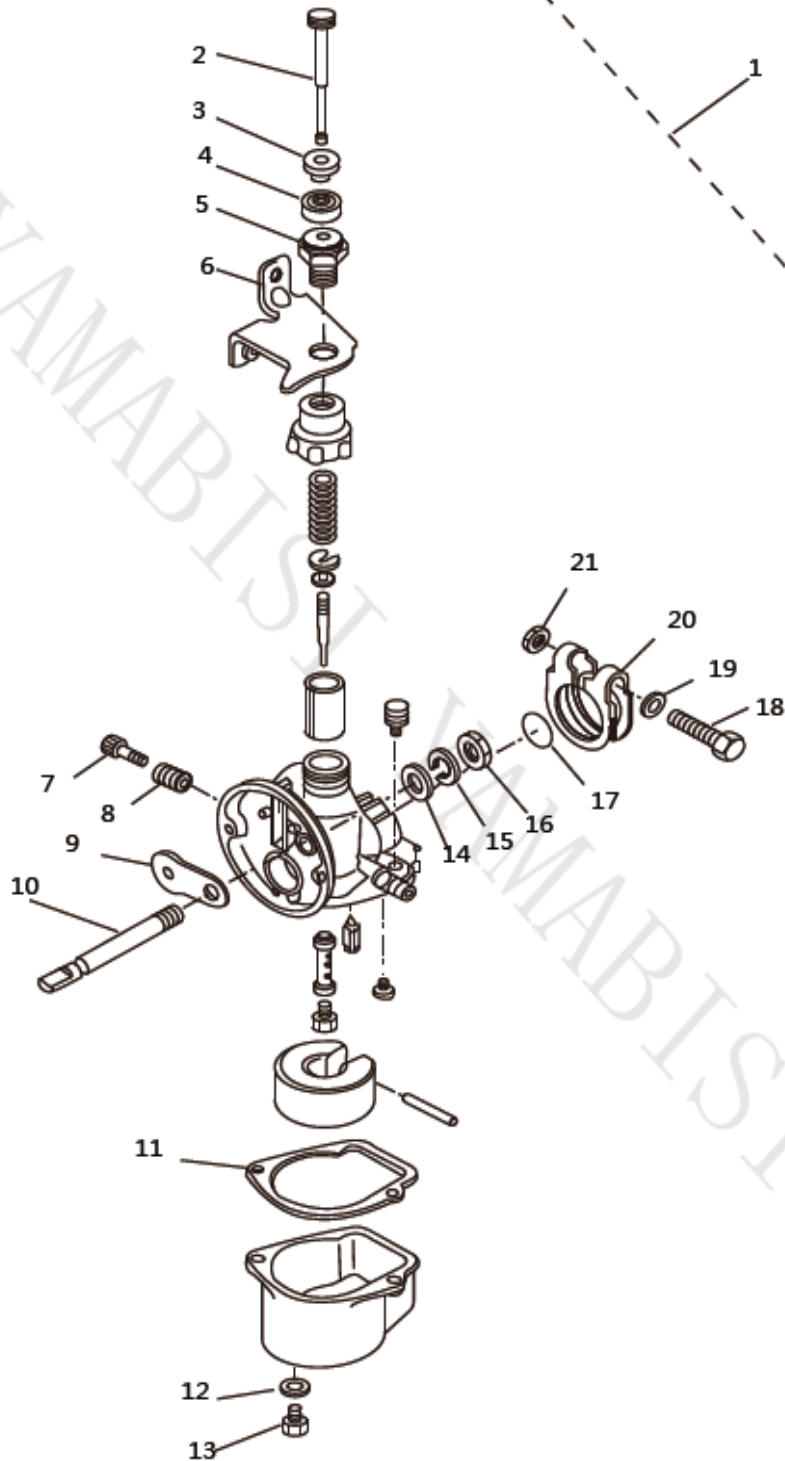


1	ALT2. 5-02030000	CARBURETOR UNIT ASSY	1
2	ALT2. 5-02030001	BAR, THROTTLE	1
3	ALT2. 5-02030002	SPACER	1
4	ALT2. 5-02030003	NUT, THROTTLE	1
5	ALT2. 5-02030004	SCREW, THROTTLE	1
6	ALT2. 5-02030005	STAY, THROTTLE WIRE	1
7	ALT2. 5-02030006	TOP, MIXING CHAMBER	1

8	ALT2. 5-02030007	SPRING, THROTTLE VALVE		1
9	ALT2. 5-02030008	CAP		1
10	ALT2. 5-02030009	BAR, VALVE		1
11	ALT2. 5-02030010	WASHER, NOZZLE		1
12	GB/T93-87	WASHER		2
13	GB/T818-2000	BOLT, PAD HEAD		2
14	GB/T96-85	WASHER		1
15	GB/T93-87	WASHER		1
16	GB/T6170-86	NUT		1
17	GB/T3452. 1-92	O-RING		1
18	GB/T5789-2000	FLANGE NUT		1
19	GB/T96-85	WASHER		1
20	ALT2. 5-02030011	NEEDLE, CARBURETOR		1
21	GB39-88	NUT		1

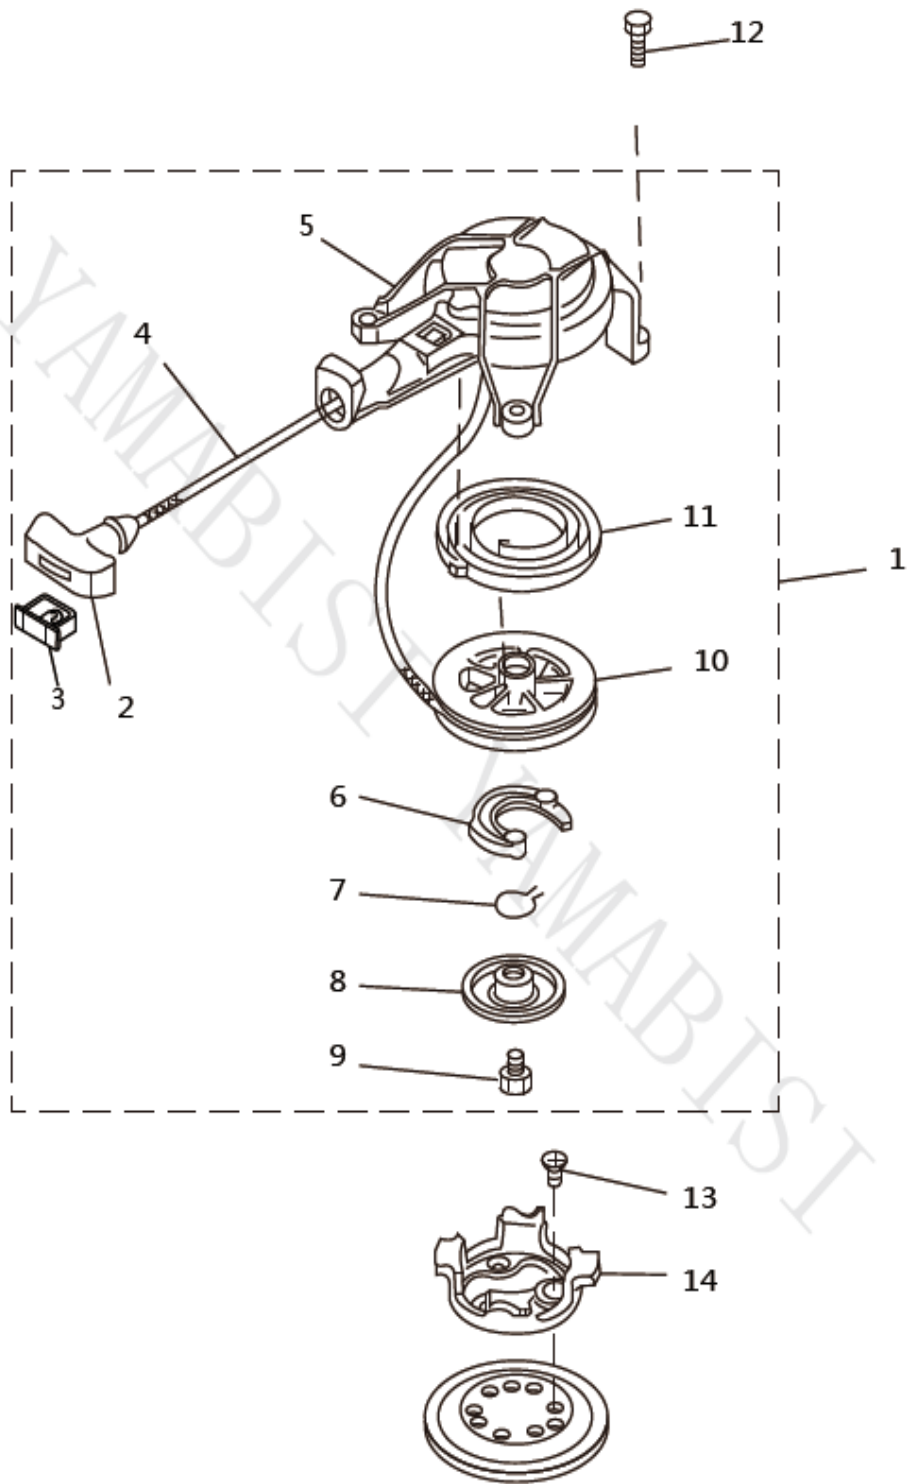


1	ALT2. 5-02010000	STARTER ASSY		1
2	ALT8-03010012	HANDLE,STARTER		1
3	ALT8-03010013	CASE,HANDLE		1
4	ALT2. 5-02000408	WIRE		1
5	ALT2. 5-02000400	CASE,STARTER		1
6	ALT2. 5-02000401	PAWL,DRIVE		1
7	ALT2. 5-02000406	SPRING,DRIVE PAWL		1

8	ALT2. 5-02000405	SHAFT,STARTER		1
9	GB/T5789-2000	BOLT		1
10	ALT2. 5-02000404	DRUM,SHEAVE		1
11	ALT2. 5-02000407	SPRING,STARTER		1
12	GB/T5789-2000	BOLT		3
13	GB/T819-2000	SCREW,FLAT HEAD		3
14	ALT2. 5-02000402	PULLEY,STARTER		1

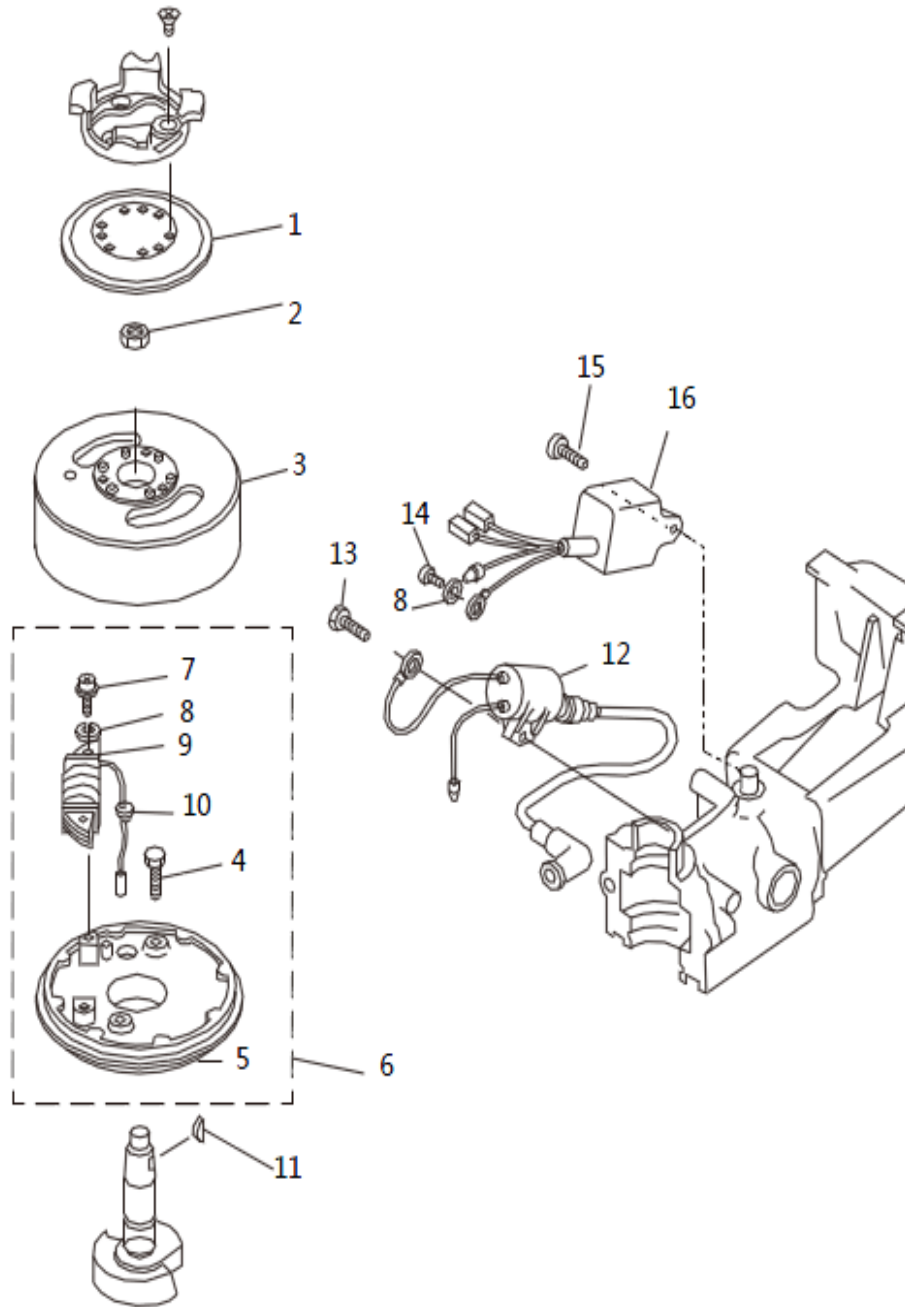


1	ALT2. 5-02000403	COVER, HOLE		1
2	GB/T6177-86	FLANGE NUT		1
3	ALT2. 5-08000004	ROTOR ASSY		1
4	GB/T5789-2000	FLANGE BOLT		2
5	ALT2. 5-02000017	PLATE, COIL		1

6	ALT2. 5-08000005	COIL,PULSER		1
7	GB/T818-2000	SCREW,PAN HEAD		2
8	GB/859-87	WASHER		3
9	ALT2. 5-08000001	CHARGE COIL		1
10	ALT2. 5-02000020	PROTECTOR,WIRE		1
11	GB/T1099. 1-2003	KEY,WOODRUFF		1
12	ALT2. 5-08000002	IGNITION COIL ASSY		1
13	GB/T5789-2000	FLANGE BOLT		1
14	GB/T818-2000	SCREW,PAN HEAD		1
15	GB/T5789-2000	FLANGE BOLT		1
16	ALT2. 5-08000003	C.D.I.UNIT ASSY		1

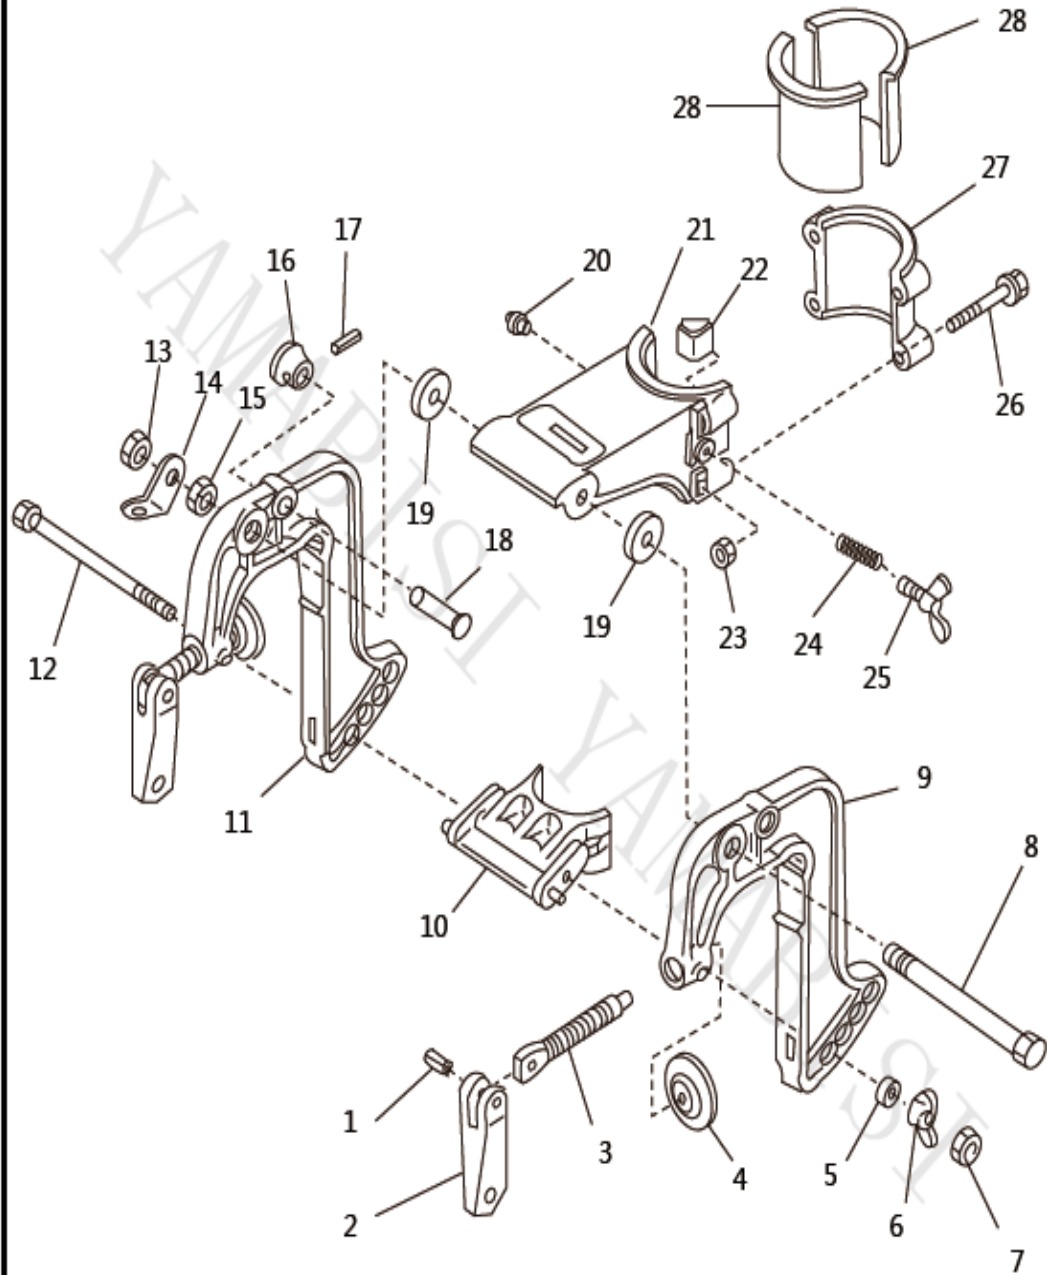


1	ALT8-05000203	PIN		2
2	ALT8-05000204	HANDLE,TRANSOM CLAMP		2
3	ALT8-05000202	SCREW,TRANSOM CLAMP		2
4	ALT8-05000205	PAD,TRANSOM CLAMP		2
5	ALT2. 5-05000027	WASHER,BIG		1

6	GB/T62-88	NUT M6		1
7	GB/T6183-86	LOCKING NUT M6		1
8	GB/T5789-2000	NUT M8*110		1
9	ALT2. 5-05000001	BRACKET,CLAMP 1		1
10	ALT2. 5-05000003	RECEIVER, THRUST		1
11	ALT2. 5-05000002	BRACKET,CLAMP 2		1
12	GB/T5789-2000	NUT M6*110		1
13	GB/T6183-86	LOCKING NUT M8		1
14	ALT8-05000012	PLATE, CLAMP BRACKET		1
15	GB/T6170-86	NUT M8		1
16	ALT2. 5-05000016	KNOB,STOPPER		1
17	GB879-86	PIN,SPRING		1
18	ALT2. 5-05000015	SHAFT,STOPPER		1
19	ALT2. 505000028	WASHER PLATE		2
20	ALT8-05000014	NIPPLE,GREASE		1
21	ALT2. 5-05000004	BRACKET, SWIVEL 1		1
22	ALT2. 5-05000020	PLATE, FRICTION		1
23	GB/T6170-86	NUT M6		4
24	ALT2. 5-02000303	SPRING, COMPRESSION		1
25	ALT2. 5-05000300	LOCKING BOLT, WING		1
26	GB/T5789-2000	BOLT		4
27	ALT2. 5-05000005	BRACKET, SWIVEL 2		1
28	ALT2. 5-05000006	BUSHING, PIVOT SHAFT		2

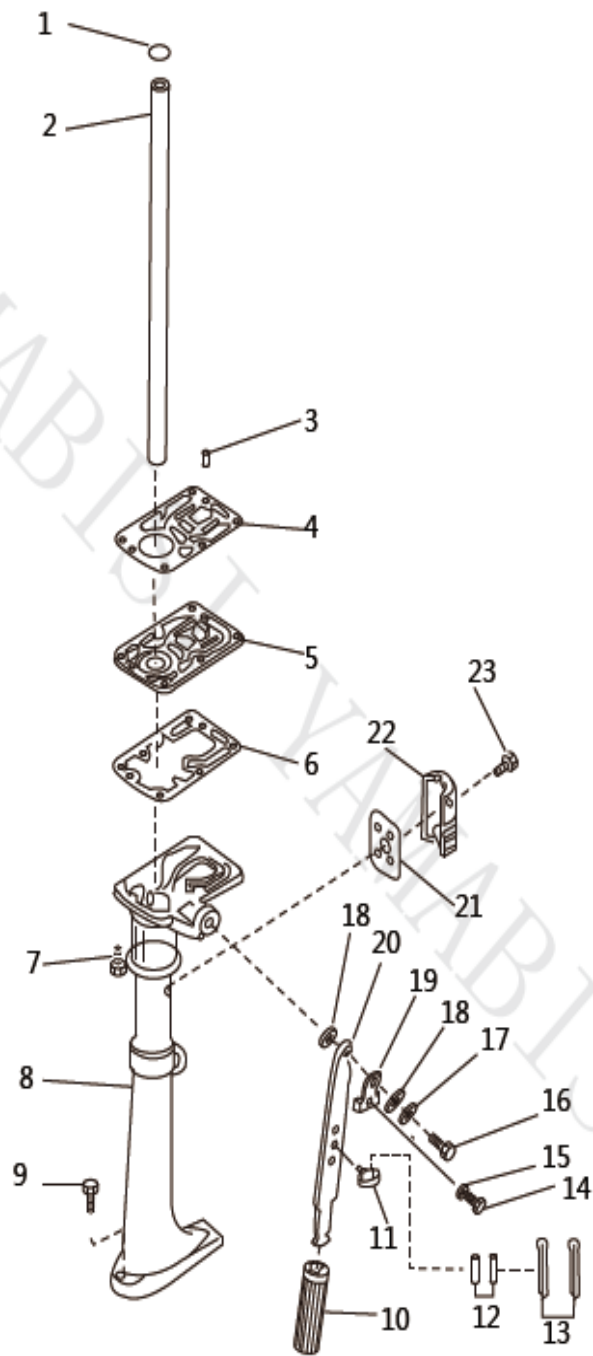

1	GB/T3452. 1-92	O-RING		1
2	ALT2. 5-05000021	PROTECTOR,SHAFT		1
3	GB/T119. 1-2000	PIN,LOCATING		2
4	ALT2. 5-05000009	GASKET,ENGINE		1
5	ALT2. 5-05000022	PLATE,ENGINE BOTTOM		1

6	ALT2. 5-05000023	GASKET,BASE		1
7	GB/T5789-2000	HEX FLANGE BOLT		6
8	ALT2. 5-07000017	CASING,UPPER		1
9	GB/T5789-2000	HEX FLANGE BOLT		1
10	ALT2. 5-05000024	HOLDER,STEERING HANDLE		1
11	ALT2. 5-01000103	GRIP,ASSY		1
12	GB/T119. 1-2000	TUBE		2
13	GB/T91-2000	PIN,COTTER		2
14	GB/T5789-2000	HEX FLANGE		1
15	GB/T93-87	WASHER		1
16	GB/T5789-2000	HEX BOLT		1
17	ALT2. 5-05000025	WASHER,BIG		1
18	ALT2. 5-05000026	COPPER WASHER		2
19	ALT2. 5-01000006	CLAMP,STEERING HANDLE		1
20	ALT2. 5-01000101	STEERING HANDLE		1
21	ALT2. 5-07000020	GASKET,EXHAUST		1
22	ALT2. 5-07000019	CAP,EXHAUST		1
23	GB/T5789-2000	HEX FLANGE		1

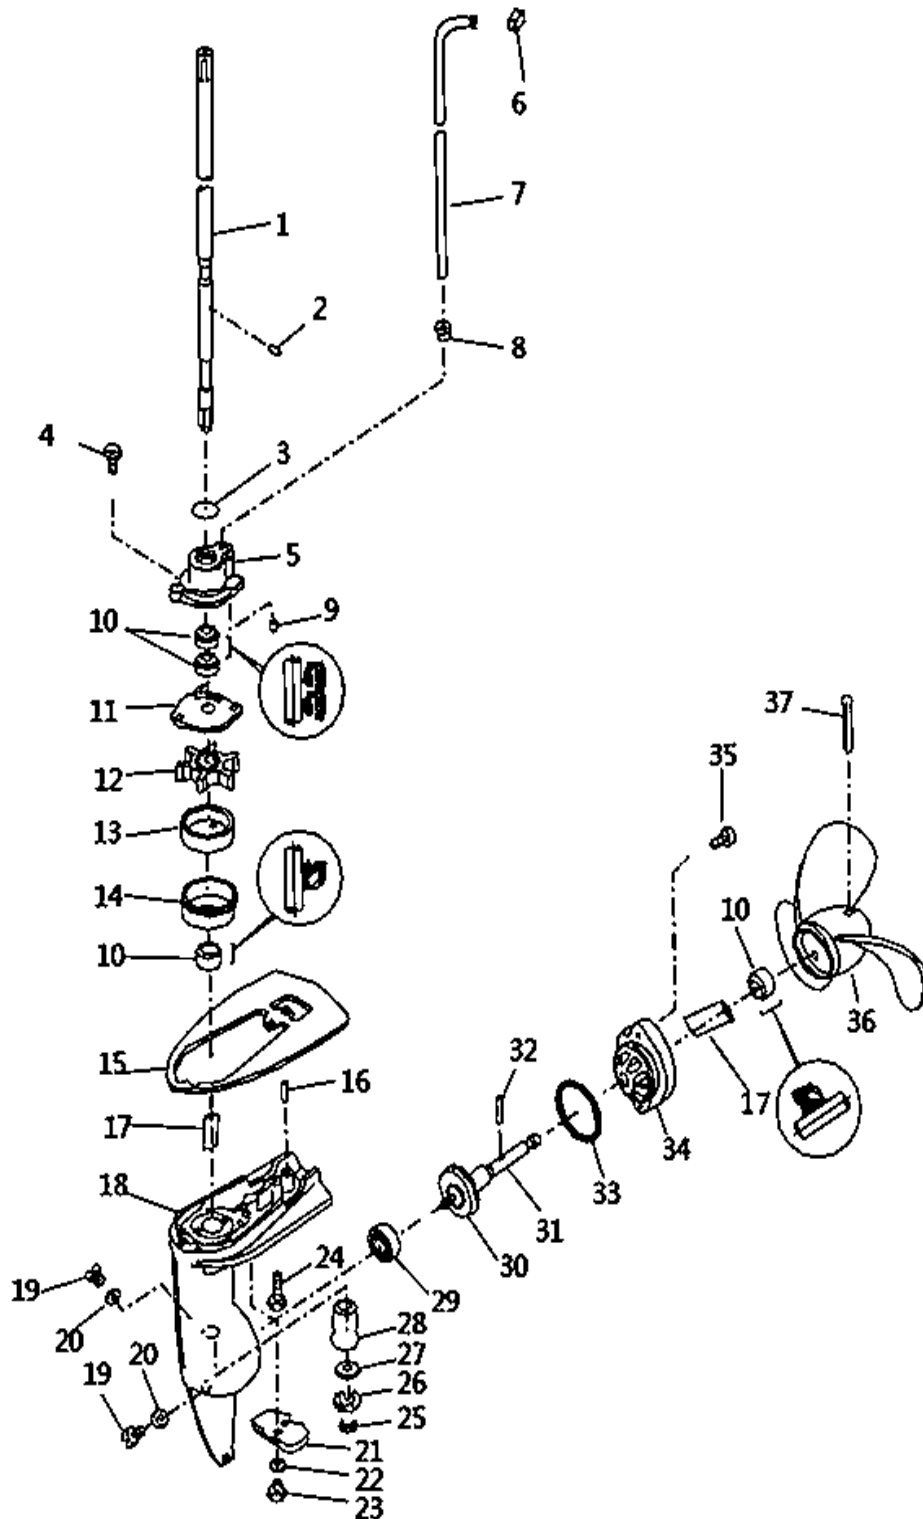

1	ALT2. 5-07000006	DRIVE SHAFT		1
2	GB/T119. 1-2000	PIN		1
3	GB/T3452. 1-92	O-RING		1
4	GB/5789-2000	BOLT		2
5	ALT2. 5-07000011	WATER PUMP BASE		1

6	ALT2. 5-07000021	OIL SEAL		1
7	ALT2. 5-05000014	WATER INLET PIPE		1
8	ALT2. 5-07000022	SEAL		1
9	GB/T119. 1-2000	PIN		2
10	ALT2. 5-07000023	OIL SEAL		4
11	ALT2. 5-07000018	WATER STOPPER		1
12	ALT2. 5-07000015	IMPELLER		1
13	ALT2. 5-07000013	OUTER PLATE,CARTRIDGE		1
14	ALT2. 5-07000014	INSERT,CARTRIDGE		1
15	ALT2. 5-07000016	OUTER FLANGE		1
16	GB/T119. 1-2000	PIN		2
17	ALT2. 5-07000002	COPPER TUBE		2
18	ALT2. 5-07000001	LOWER CASING		1
19	GB/T5782-2000	OIL NUT		2
20	ALT8-07000001	GASKET		2
21	ALT2. 5-07000024	ANODE		1
22	GB/T861. 1-87	WASHER,INTERNAL TOOTH		1
23	GB/T5789-2000	NUT		1
24	GB/T5789-2000	NUT		2
25	GB896-86	CIRCLIP		1
26	ALT2. 5-07000007	PINION		1
27	ALT2. 5-07000025	WASHER		1
28	ALT2. 5-07000026	COPPER TUBE,COTTER		1
29	GB/T276-95	BEARING 6000		1
30	ALT2. 5-07000009	GEAR		1
31	ALT2. 5-07000005	PROPELLER SHAFT		1
32	GB/T119. 1-2000	PIN		1
33	ALT2. 5-07000004	O-RING		1
34	ALT2. 5-07000003	CAP,LOWER CASING		1
35	GB/T5789-2000	BOLT		2
36	ALT2. 5-01000008	PROPELLER		1
37	GB/T91-2000	PIN,COTTER		1
		редуктор в сборе		